
SETUP


1

Insert ADAPTOR into ROTOR

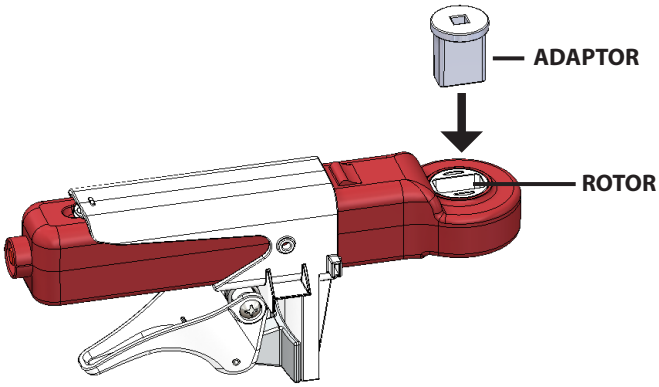


2

Insert U-PADDLES into SHAFT

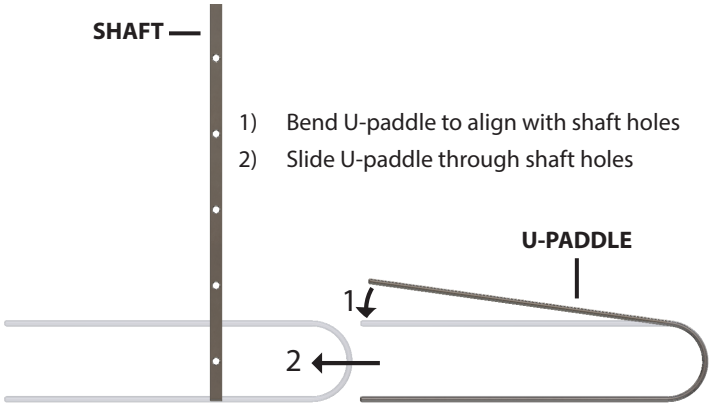


3

Insert assembled SHAFT into ADAPTOR from below

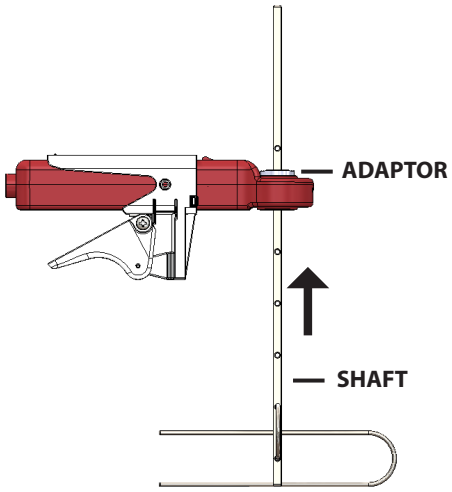


4

Attach StirMATE with ROTOR centered to pot.
Adjust U-PADDLEs towards pot edge.

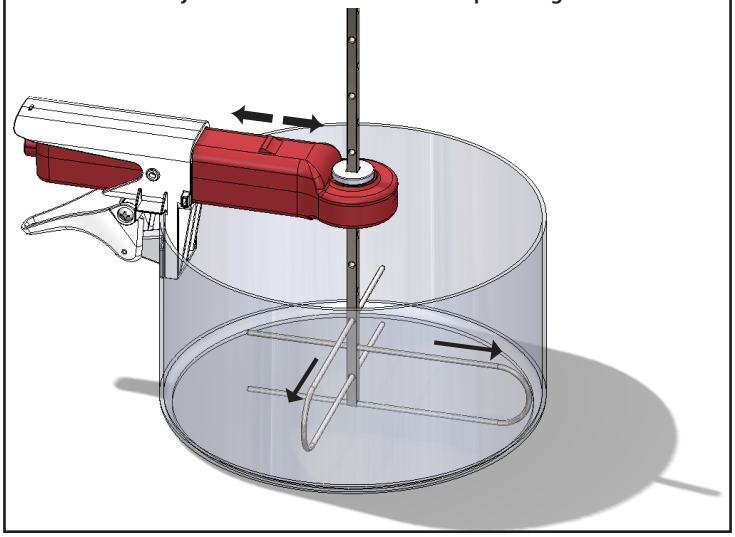

ADDITIONAL POT SCRATCH PROTECTION

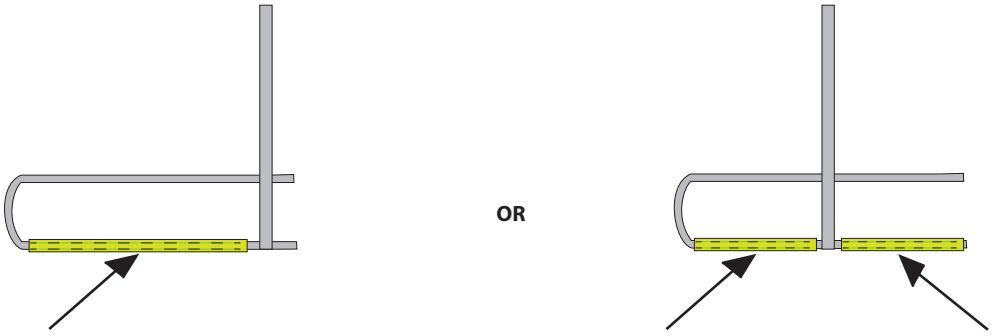

FOR ADDED POT SCRATCH PROTECTION

Slide silicone tubing over the U-Paddle to suit the radius of the pot.
A couple of drops of vegetable oil helps this process.